



## Trick Ski with Screw Retention Plate (SRP) Mounting Instructions

### Recommended Binding Placement

With your foot in your binding, locate the inside ankle bone in your front boot.

Mark this spot down on the binding plate.

This is your ANKLE centerline.

Find the centerline of your ski.

For 40"-42" skis put your ANKLE centerline 0.25" forward of the ski centerline.

For 43"-45" skis put your ANKLE centerline 0.375" forward of the ski centerline.

Please only use screws that are provided with the trick ski to mount the front binding.


**DO NOT USE SCREWS THAT COME WITH THE BINDING**

Please only use a hand screw driver to tighten the screws to avoid cross threading of the screw and insert.

### Mounting a Rear Binding on a Rubber Edge or Hard Edge trick with SRP

Rear binding placement is according to personal preference.

Please use a 7/64" drill bit to drill pilot holes 1/4" deep. Do not drill any deeper. You must be sure to go through the aluminum screw retention plate just under the top-skin of the ski.

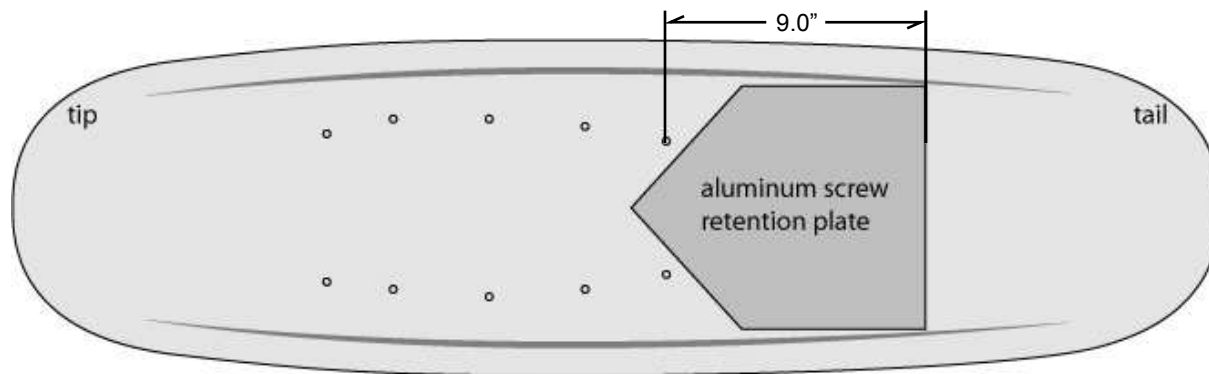

Please only use screws that are provided with a D3 ITP or RT Complete to mount the rear binding. Please only use a hand screw driver to tighten the screws to avoid stripping the screw retention plate.

We recommend the use of our **ITP** (Invert trick plate)

If you are planning to do inverted tricks this new plate can help reduce the chance of heel dents. Heel dents are not covered under our warranty policy.

D3 SKIS  
3526 B Street NW, Suite 101  
AUBURN, WA 98001

P: 916-714-9389  
e-mail: [info@d3skis.com](mailto:info@d3skis.com)  
[www.d3skis.com](http://www.d3skis.com)